CORKSPORT Con. CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT L c out k CORKSPORT CORKSPORT CORKSPORT



CorkSport 1.6L and 1.8L "B" Series Engine DOHC Adjustable Camshaft Gears

## Tools and Supplies Required

- 10mm Wrench and Socket 3/8 and 1/4 drive
- 12mm Wrench and Socket 3/8 drive
- 14mm Wrench and Socket 3/8 drive
- <sup>1</sup>/<sub>4</sub> and 3/8 Drive Ratchet
- ½" Drive Torque Wrench Et/Lbs/
- ½" Drive 21mm Socket
- ½" Drive Ratchet
- 1/2" Drive 2" Long Extension
- 10" Adjustable wrench

## CORKSPORT Contents

CORKSPOR

CorkSport Adjustable Camshaft CORKSPOR Gears

- Long Needle Nose Pliers
- 3/8" Drive Torque Wrench In/Lbs

CORKS

CORK

- Safety Glasses
- New Valve Cover Gasket
- Factory Service Manual K
- Thread Locker (Red)
- Floor Jack and Jack Stands CORKSPORT
- Timing Light

• 16 Page Installation Instructions CORKSPOR

MRK SPORT

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

RKSPORT WARNING: When installing adjustable camshaft gears on your engine care should excercised when adjusting camshaft timing. Piston to valve contact could occur if timing is adjusted improperly. This will cause serious engine damage.

CORKSPORT

NOTE: These install instructions were written using a 1990 Mazda Protégé with a 1.81 DOHC engine. Test vehicle was not equipped with A/C, however, instructions for ORKSPORT removing the A/C and power steering belt are the same.

Installation on a Mazda Miata, 323, or Ford Escort are similar.

CORKSPOI NOTE: These install instructions were written to be used as a guide only. The use of a CORKSPORT factory service manual is recommended. Please read these instructions thoroughly before proceeding. Installation should take approximately 2 hours.

The installation of these gears should only be preformed by an experienced mechanic.

CORKSPO

CORKS

CORK

CORKSPORT

CORKSPOR

TIP: Mazda recommends timing belt replacement at 60,000 mile intervals. If you are close to that interval CorkSport recommends replacement of the timing belt during installation of the gears. These instructions do not cover timing belt replacement.

WARNING: Make sure engine is completely cooled down prior to installation as serious injury or burns can occur.

Step 1: Remove spark plug wires from the spark plugs.

CORKSPORT

CORKSPOR



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR

CORKSPORT

CORKSPORT

RKSPORT

MARK SPORT

CORKSPORT CORKSPORT

RKSPORT Step 2: Remove PVC and crank case vent hose from valve cover.

> NOTE: Test vehicle is equipped with a crank case vent filter (right image). Normally a hose is at this connection.

CUN

CORKSPORT

60

CORKSPORT


CORKSPO

CORKS


CORK

60

CORKSPORT

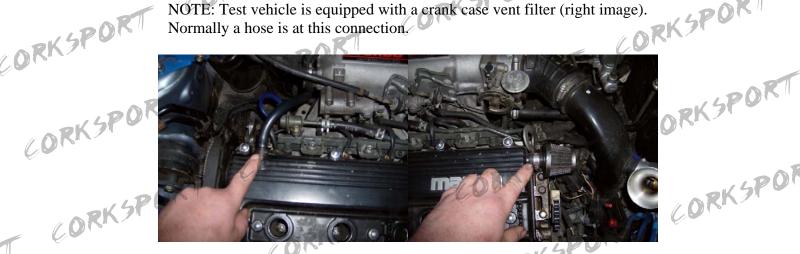

Step 3: Remove eleven (11) 10mm head bolts from valve cover and remove valve cover.

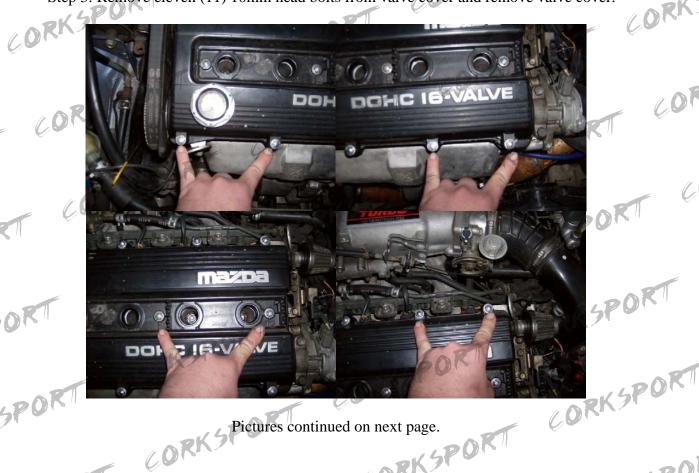

CORKSPORT

RKSPORT

CORKSPORT

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

CORKSPORT

MARK SPORT

RKSPORT

CORKSPOR CORKSPORT 601 ORKSPORT RKSPORT RKSPORT CORKSPORT ORKSPORT Do CORKSPOR Step 4: Remove four (4) 10mm head bolts from upper timing cover and remove cover. CORKSPORT CORKSP CORKSPO CORKS



RKSPORT

CORKSPORT

CORKSPORT

CORKS

CORK

60

1/4PC

CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR

CORKSPOR ARK SPORT

CORKSPORT RKSPORT Step 5: Loosen 14mm head power steering pump pivot bolt and 14mm head adjustment hold down nut. Loosen 12mm head adjusting bolt until belt can be removed and CORKSPORT remove belt.

601

CORKSPO

CORKS

CORK

60

CORKSPORT

PORT

RKSPORT

CORKSPORT



Step 6: Loosen three (3) 10mm head bolts from water pump pulley, Loosen 12mm head alternator lock down bolt and 14mm head alternator pivot bolt. Remove belt then remove the three (3) water pump pulley bolts and pulley.



CORKSPORT

CORKSPORT CORKSPOK 601 CORKSPORT RKSPORT CORKSP CORKSPORT CORKSPORT CORKSPORT CORK CORKSPORT CORKSPORT Step 7: Remove the 10mm head bolt from mid timing cover and remove cover. CORKSPORT KSPORT CORKSPO CORKSPOR DRKSPORT CORKSPORT CORKS PORT Step 8: With a 21mm socket, rotate engine until yellow timing mark on crank pulley lines CORK up with the "T" on the lower timing cover and the "I" and "E" line up with the alignment marks on the backing plate. 60



RKSPORT

CORKSPORT

CORKSPORT

Pictures continued on next page.

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOK ORK SPORT

CORKSPOR

CORKSPOK CORKSPORT RKSPORT RKSPORT CORKSPORT ORKSPORT CORKSPOR ORKSPORT

601

CORKSPO

CORKS

CORK

60

Step 9: Remove timing belt tensioner spring. Loosen 14mm head tensioner pulley bolt and remove timing belt from camshaft gears.

CORKSPORT

RKSPORT

CORKSPORT



Step 10: Holding the hex portion of the camshaft, remove the 14mm head bolts from the camshaft gears and remove gears.



Pictures continued on next page.

CORKSPORT

RKSPORT CORKSPORT CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORK SPOR MARK SPORT

CORKSPORT RKSPORT CORKSPORT ORKSPORT CORKSPOR

601

CORKSPO

CORKS

CORK

CORKSPORT

RKSPORT

RKSPORT

CORKSPORT

the hex portion of the camshaft to hold it while tightening the 14mm head bolts for the gears. Tighten bolts to 37-44ft/lbs. Make sure the five (5) 6mm Aller 1 Step 11: Install the CorkSport camshaft gears making sure that the "I" is up on the intake camshaft and the "E" is up on the exhaust camshaft. Use an adjustable wrench on

NOTE: The cam gears are a snug fit onto the cams, be sure dowel pin is lined up with cam gear slot before tightening center bolt.



CORKSPORT

RKSPORT CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR

NRK SPORT

CORKSPORT RKSPORT CORKSPORT ORKSPORT CORKSPOR

601

CORKSPO

CORKS

CORK

60

CORKSPORT

RKSPORT

refer to a factory service manual for the full instructions.

Step 12: Make and its service manual for the full instructions. NOTE: The following steps of the instructions are to be used as a guide. Please

Step 12: Make sure that crank shaft pulley timing marks are still lined up. With a 14mm wrench, rotate the exhaust cam gear in a clockwise direction until the white dot belt over the exhaust gear, while making sure to keep tension on the belt. Now rotate the intake camshaft in a counter clockwise direction. timing mark on the gear is just past the mark on the plate and install the timing rotate the intake camshaft in a counter clockwise direction with a 14mm wrench until the white dot timing mark on the gear is just before the mark on the backing plate and install the belt onto the intake camshaft gear.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR ORK SPORT

CORKSPORT Step 13: Reinstall tensioner pulley spring. While holding tension in a counter clockwise direction of the camshaft gear, tighten the idler pulley bolt. RKSPORT

60

CORKSPO

CORKS

CORK

60

CORKSPORT



CORKSF Step 14: With a 21mm socket, rotate the crankshaft 2 full revolutions and double check that all timing marks are lined up.

NOTE: If timing marks do not line up, you will need to go back to step 10 and start over.



CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

CORKSPOR MARK SPORT CORKSPORT CORKSPORT

CORKSPORT

RKSPORT

CORKSPORT

RKSPORT Step 15: Reinstall the middle plastic timing belt cover with its original 10mm head bolt. CORKSPORT

601

CORKSPORT

CORKSPO

CORKS

CORK

60



Step 16: Reinstall upper timing belt cover with its original four (4) 10mm head bolts.

NOTE: You may leave this cover off. corks it be left off. into the timing belt area with the cover off. Therefore it is not recommended that



DRKSPORT CORKSPORT CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORK SPOR

OPK SPORT

CORKSPORT RKSPORT Step 17: Reinstall water pump pulley with its original three (3) 10mm head bolts.

CORKSPORT

CORKSPORT

RKSPOR

CORKSPORT

CORKSPORT

TIP: It will be easier to fully tighten bolts after belt is reinstalled. You will need to get them as tight as possible before belt is reinstalled.

60

CORKSPORT

CORKSPORT

CORKSPO

CORKS

CORK

60

CORKSPOR



bolt and 14mm pivot bolt on alternator. Step 18: Reinstall water pump/ alternator belt. Tension belt and tighten 12mm hold down




Step 19: Reinstall power steering/ A/C belt. Tighten 12mm head tensioner bolt until belt is tensioned. Tighten 14mm head hold down bolt and 14mm head pivot bolt.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORK SPOK

ORK SPORT

(5) CORKSPOR Car CORKSPORT 601 CORKSPORT RKSPORT CORKSP CORKSPORT CORKSPORT CORK CORKSPORT CORKSPORT CORKSPORT corners of distributor and around spark plug holes. Step 20: Apply small amount of silicone sealant at corners of front cam shaft caps, at CORKSPO CORKS CORKS CORK

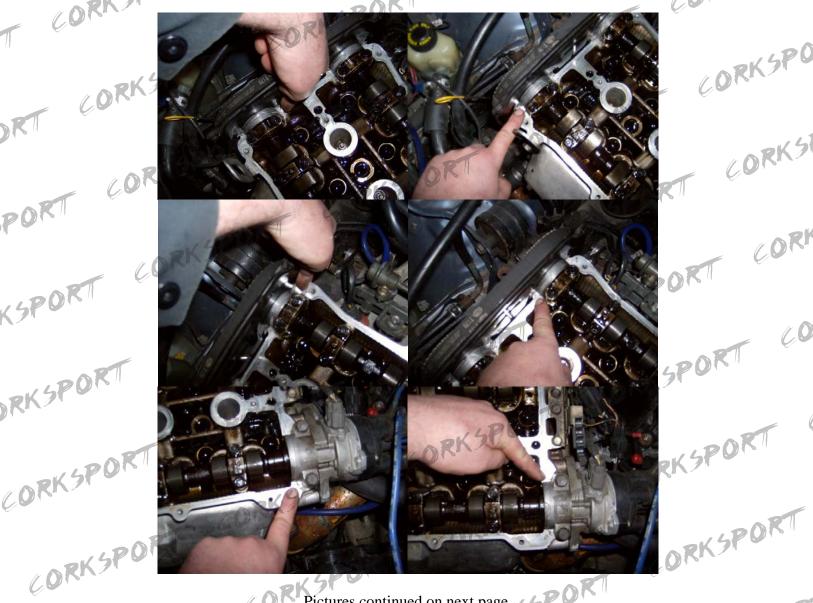

60

1/4PC

Pictures continued on next page. 457

RKSPORT

CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR ORK SPORT

CORKSPOK Con. CORKSPORT 60 RKSPORT KSPORT CORKSPORT ORKSPORT CORKSPOR CORKSPORT eleven (11) original 10mm head bolts. Tighten bolts to 61-95in/lbs. Step 21: Install new valve cover gasket in valve cover and reinstall valve cover with CORKSPO CORKSPORT DRKSPORT CORKSPORT CORKS Step 22: Reconnect PCV and crank case vent hose to valve cover. PORT CORK 60 SPORT RKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT CORKSPORT RKSPORT CORKSPOR Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR MARK SPORT

CORKSPORT CORKSPORT

RKSPORT Step 23: Reinstall spark plug wires.

CORKSPO!

CORKSPORT

CORKSPOR



Con

CORKSPORT

60

CORKSPO

CORKS

CORK

60

CORKSPORT

CORKSPOR



With a timing light, verify that timing is correct at the crank shaft timing marks. 12mm head distributor lock down bolts and rotate distributor until timing is correct.

Once timing is correct remove jumper wire and test drive

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

NRK SPORT

If at anytime during the test drive your vehicle has pinging (detonation) release throttle and get your vehicle to a safe place to recheck ignition timing. If ignition timing is correct, super unleaded fuel may be required.

CORKSPORT

CORKSPORT

RKSPORT

CORKSPO!

CORKSPORT

CORKSPORT

CORKSPOR Step 25: (Optional) To achieve the maximum benefit from the adjustable cam shaft gears, CorkSport recommends that you take your vehicle to a dyno and make adjustments

For adjustment of cam shaft timing, loosen the five (5) 5mm allen head bolts on cam gear and using the 14mm head center bolt. rotate cam shaft with on cam gears. Cl. The on cam gears. Clockwise rotation of cam shaft, advances the cam shaft and counter

CORKSPO

CORKS

CORK

CORKSPORT

RKSPORT

ORK SPORT

CORKSPORT

WARNING: Take care while rotating cam shafts as valve to piston contact can occur which will cause serious engine damage.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK CORKSPOR